





# AGA CITY60 TIMER

## QUICK GUIDE

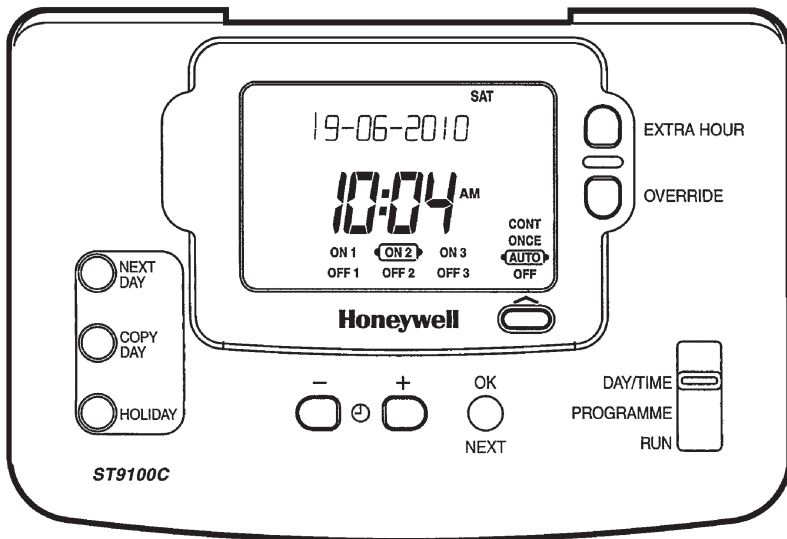

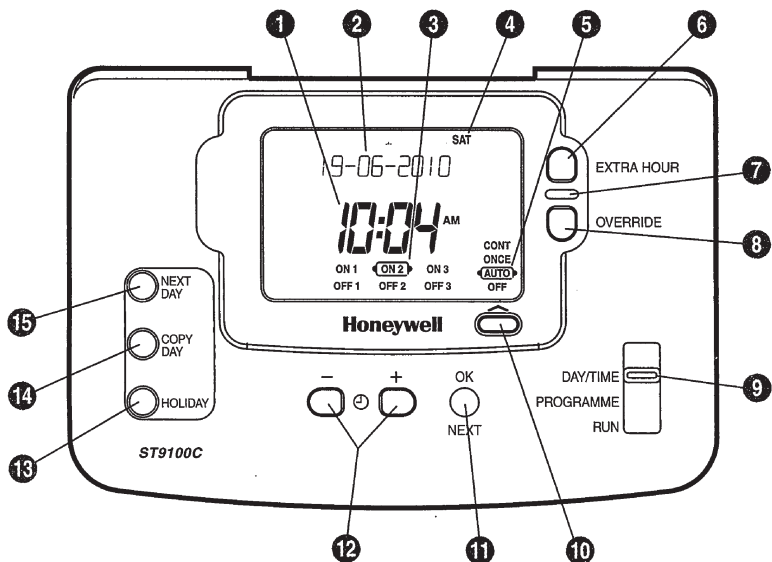

- |                            |                          |
|----------------------------|--------------------------|
| 1 Time Display             | 9 Slider                 |
| 2 LoT™ Technology Display  | 10 Operating Mode Button |
| 3 Programme Time Markers   | 11 OK/Next Button        |
| 4 Day of Week Indicator    | 12 Clock – and + Buttons |
| 5 Operating Mode Indicator | 13 Holiday Button        |
| 6 Extra Hour Button        | 14 Copy Day Button       |
| 7 Indicator Lamp           | 15 Next Day Button       |
| 8 Override Button          |                          |

Fig. 1

This guide should be read in conjunction with the AGA City users guide.

Fuller details of all timer functions and features are given in the ST9100C user guide.

The purpose of your timer is to allow for the top oven to be brought up to temperature in advance of cooking, either baking or roasting heat as determined by the AGA cooker oven control knob. We recommend that your timer should be set to come **ON 1 HOUR** before cooking is to commence.

It should not be used for timing an actual cooking operation, as the oven retains its heat for long a period after the timer will have switched off.

The timer does not control the lower oven or the hotplate.

## Controls

Please refer to Fig. 1. Lift the cover to reveal access to the control buttons.

## Displaying the correct time of day

This should be showing towards the top of the display.

Your timer has been factory pre-set for the correct time of day.

It will automatically adjust to the spring and autumn clock changes.

In the event of power cut, the time of day and programmed events are automatically remembered.

If the time of day or date has been lost for any reason it can be restored as described in the full user guide.

## Setting Programme Events

The timer can provide for up to three events per day.

To enter a programme, move the slider to the 'Programme' position.

The actual day being programmed will be displayed for the first 'ON' time.

Use the '+' or '-' buttons to reach the desired 'ON' time then press 'OK'. The message 'Saved' will be displayed.

Then enter the first 'OFF' time, again using the '+' and '-' buttons. Remember to allow for the actual length of time you will be cooking for, then press 'OK'.

This procedure is then repeated for the second and third events of that day if needed.

Even if you do not require second or third events you still need to make an entry. In this case enter identical 'ON' and 'OFF' times for both events, e.g. ON 18.00 OFF 18.00, then press 'OK' each time.

The message 'SAVED' then 'COMPLETE' will be displayed.

You will then be invited to enter programmes for other days of the week.

For identical programmes for each day press 'COPY DAY' then 'OK'.

For individual programmes for each day press 'NEXT DAY'. This day will then be displayed. If this is the day you wish to change press the 'OK' button or press 'NEXT DAY' until the required day is shown. Then enter the three sets of 'ON' and 'OFF' as described above.

Repeat for each day of the week.

When you have finished programming, move the slider back to the 'RUN' position.

## Running Programmes

The green indicator illuminates when the oven is 'ON'.

To run the programmed events, press the 'MODE' button until 'AUTO' is displayed.

Remember to set the AGA oven control knob to the desired temperature for the top oven, either 'ROAST' or 'BAKE' with the option of also having the lower oven 'ON' or 'OFF', but remember that the lower oven will not be timed and will start to warm immediately.

If you need to bring the top oven 'ON' during a normally 'OFF' period, press the 'OVERRIDE' button. The oven will then stay 'ON' until the next 'OFF' setting, but the set programmes will not be altered.

The 'OVERRIDE' button can be used to turn the oven 'OFF' during a programmed 'ON' period.

If you want to keep the oven 'ON' permanently, press the 'MODE' button until 'CONT' is displayed, or 'OFF' if the oven is to be kept OFF permanently. Remember to press the 'MODE' button to 'AUTO' to regain the stored programmed operation.

If for any reason your cooking requires an extension to the planned cooking period, push the 'EXTRA HOUR' button to extend it. This will not interfere with your programmed events.





**For further advice or information  
contact your local AGA Specialist**

With AGA Rangemaster's policy of continuous product improvement, the Company reserves the right to change specifications and make modifications to the appliance described and illustrated at any time



Supplied by

AGA Rangemaster  
Station Road  
Ketley Telford  
Shropshire TF1 5AQ  
England